

# How to Install Your Polarized Adhesive Film

**IT IS CRUCIAL THAT YOU FOLLOW ALL INSTRUCTIONS TO GET A GOOD FILM INSTALLATION!!!**  
Not following the instructions correctly may result in trapped dirt that will appear as air bubbles under the film. Read the entire instruction set first before attempting to install the film. The film must be fully installed with both masks removed to function properly. Just placing the masked film against the screen will not work.



## #25675

**Step 1:** Your polarized adhesive film is masked on two sides. They are labeled Step 1 which covers the tacky side and the mask should be clear. And Step 2 which covers the top surface and the mask should be colored.

**Step 2:** Make certain that your film fits the display. Lay the film onto the display area to be certain that it is sized correctly. A small amount of *play* or gap on all sides to allow for easy installation is normal.

**Step 3:** Clean the surface of your display with a damp, clean soft cloth. Wipe all areas of the screen, especially the edges and corners. Dry the screen with a soft dry cloth.

**Step 4:** Remove the mask covering the tacky side by pulling the label that says Step 1. Once the back side is exposed, hold the film by the edges and position the exposed tacky side to the screen edge.

**Step 5:** Allow the exposed back side to adhere to the screen, using a finger to push air bubbles from the center to the edges. Be certain the film is properly aligned to the screen dimensions.


**Step 6:** Once you are happy with the installation, remove the mask film covering the top surface labeled Step 2. You should now have a fully installed film.

**Air bubbles that will not move or edges that lift are likely dirt trapped under the film. Please see the back of this page for instructions on how to remove the dirt.**

Visit our website to see the installation video of this product. <http://www.nushield.com/install.php>



Clean the surface with wet cloth first and then dry thoroughly.

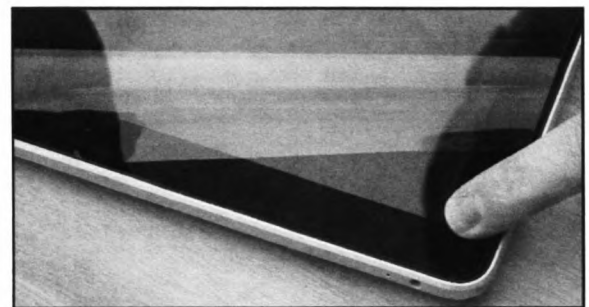

Hold the film by the masked area and place on display



Push out any remaining bubbles for complete fit of the film

# How to Clean Your Polarized Adhesive Film

You can clean the top surface with any cleaner. If you notice that dust particles have gotten on the adhesive, they can be removed.

**Step 1:** Gently lift the corner of the NuShield film near the dust particle using a piece of adhesive tape or a fingernail being careful not to damage the backside of the film.


**Step 2:** Using a small piece of adhesive tape, gently touch the film with the tape to pick the dust particle off the tacky surface.

**Step 3:** To clean the entire back surface, remove the entire film and place it back side up.

**Step 4:** Using adhesive tape, lay the strips on top of the tacky surface, overlapping them as you add each one in succession until you have covered the entire side of the film with adhesive tape. Rub the adhesive tape against the film with a finger to ensure it will adhere to the dust particles.

**Step 5:** Once the entire surface is covered with tape, remove the tape quickly and it will remove all the dust particles with it.

**Step 6:** Return to Step 3 above if the screen needs to be cleaned again and reinstall the film as indicated on the reverse side.

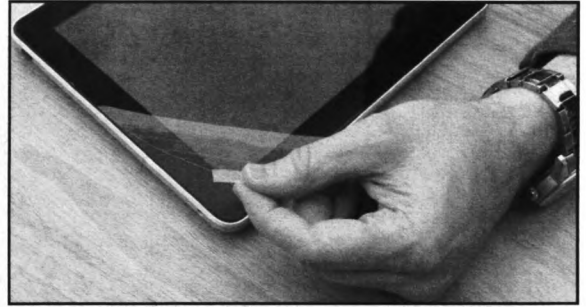

Lay adhesive tape over the particle and then pull back on tape to remove the particle



NuShield, 2865 S. Eagle Road, #400, Newtown, PA 18940-1546  
Email: [support@nushield.com](mailto:support@nushield.com)  
Sales and Support: [www.nushield.com](http://www.nushield.com)  
Phone/Fax: 215-500-6426 Toll Free: 877-900-9192

The makers of the NuShield make no Warranty, expressed or implied, on the suitability or performance of this product, except to replace any NuShield found to be defective. The makers of NuShield assumes no liability for any damages that may result to other equipment due to the use, misuse of, or inability to use the NuShield.

JS40416